



## Peel-and-Stick surface preparation

High-strength self-adhesive tape can be used on all wall surfaces

### Step 1: Clean



We recommend cleaning surface with a 50:50 isopropyl alcohol and water mixture


### Step 2: Press



Apply maximum pressure when adhering Peg to wall surface

### Step 3: Wait

Bond strength

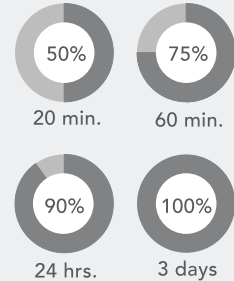

Peg tacks to wall instantly. Allow to bond 72 hours before use.

Tape should be applied at room temperature: 50-60°F (10-26°C)

Acrylic adhesive withstands fluctuations in temperature and is moisture-resistant when applied correctly

Tape can be removed with adhesive solvent and scraper